

VIBROSOUND ANALYSER

List of options

- B** - Selects the Block print-out only.
- D** - Select cut-off delay.
- E** - Exit the Options Menu.
- F** - Selects the Full Print-out Option (user data, block information and graphs).
- H** - Select channel to trigger on (option for VT1 only).
- I** - Toggles ON/OFF the graph Invert trace system (normally set to OFF).
- L** - Select the event Length.
- M** - Select Buffer Menu (including the PC Package: Monitor if fitted).
- N** - Selects No print-out (use with buffer option only).
- O** - Selects periodic print-out and time interval.
- Q** - Select number of full data to be printed before returning to block print-out.
- R** - Selects Reprint of last event.
- S** - Select Sampling rate.
- T** - Select Trigger value and sound base.
- U** - Select User data and time/date.
- V** - Verify calibration of sound system.
- W** - Select Timer ON/OFF/Set 3 Time Periods.
- X** - Select instrument gain.